

CBI T3 Twin



ARB COMPRESSOR MOUNT



Applications

installation instructions

These installation instructions apply to the following CBI Off Road products

3rd Gen Tacoma Twin ARB Compressor Mount – This tray will NOT FIT SOME MODELS. Please check your truck for an ABS distribution block that may reside on the passenger fender near the firewall. It is a block with several brake lines protruding from it. If your truck has this, the tray will not fit.

IMPORTANT!

THANK YOU for purchasing this CBI product. Please read through this entire document before proceeding with installation. If you are not confident in your mechanical skills, please seek the help of a professional to perform the installation. Check your packages immediately upon arrival to ensure that everything listed is included, and to check for damage during shipping. **If anything is missing or damaged, or if you need technical assistance with any aspect of this installation, call CBI at (208) 528-0664 as soon as possible.**


IMPORTANT!

If your CBI product comes as unpainted, bare steel or aluminum. You will want to either powder coat or paint prior to final installation, however it is very important to PRE-INSTALL the unpainted product first, following these instructions, BEFORE painting or powder coating any of the components! This will ensure that all parts are correct and any incidental trimming or drilling will have been done prior to coating. Also, it will give you a practice run to familiarize yourself with the process, to lessen the likelihood of damaging the finish during final installation.


CBI Off Road is NOT RESPONSIBLE for paint or powder coating costs, damage to paint or powder coating, or costs associated with inadvertently painting or powder coating components that are defective or were shipped or assembled in error. It is the customer's responsibility to pre-install and verify that all parts are correct prior to paint or powder coat

Hardware: What is included

A | 3 3/8"-16 Stainless Steel Serrated Hex Flange Nut

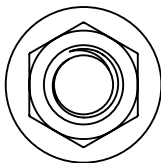

B | 1 M6-1.0 x 20 mm Steel Hex Cap Bolt




Questions?


Call: 866-522-0697

Email: info@cbioffroadfab.com


1

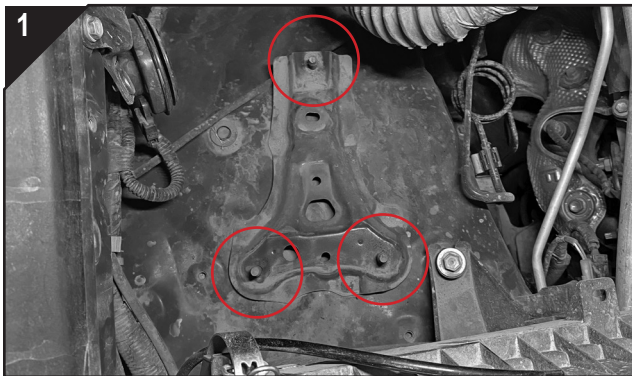


2

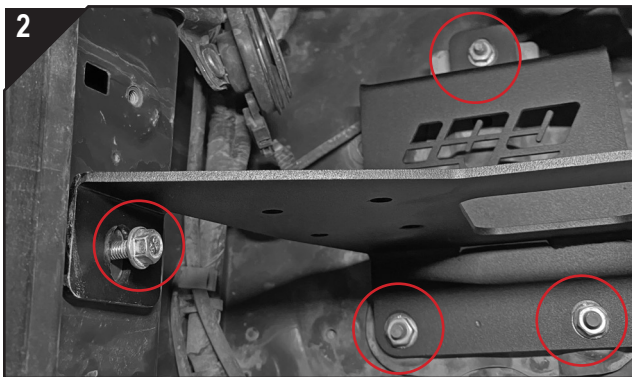

3

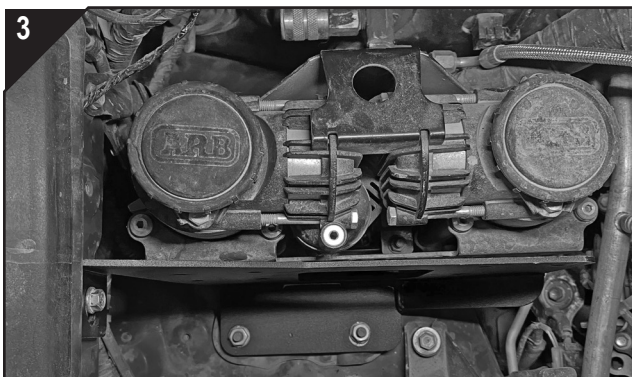

4

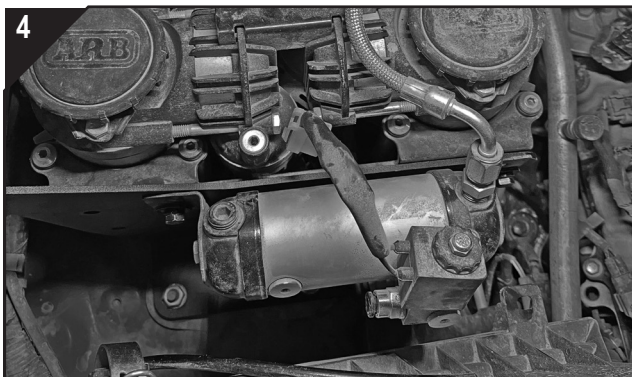

Installation

1.

Locate the three studs on the wheel well just behind the air box on the passenger side of the engine bay.

2.

Place the mounting bracket on the three studs and align the hole on the inner fender and install the supplied M6 Bolt. Tighten the M6 bolt and then install the three nuts onto the studs as shown.

3.

The eight holes on the mount will match the base plate of your twin compressor.

4.

If you are installing the manifold kit with your compressor, the manifold can be installed on the back of the bracket as shown.



792 E Iona Rd.
Idaho Falls, ID 83274
cbioffroadfab.com
208.528.0664