

**CBI 10 inch**

# HAWSE FAIRLEAD



## **Applications**

installation instructions

These installation instructions apply to the following CBI Off Road products

– **CBI 10" Hawse Fairlead**

## **IMPORTANT!**

**THANK YOU** for purchasing this CBI product. Please read through this entire document before proceeding with installation. If you are not confident in your mechanical skills, please seek the help of a professional to perform the installation. Check your packages immediately upon arrival to ensure that everything listed is included, and to check for damage during shipping. ***If anything is missing or damaged, or if you need technical assistance with any aspect of this installation, call CBI at (208) 528-0664 as soon as possible.***

## IMPORTANT!

If your CBI product comes as unpainted, bare steel or aluminum. You will want to either powder coat or paint prior to final installation, however it is very important to PRE-INSTALL the unpainted product first, following these instructions, BEFORE painting or powder coating any of the components! This will ensure that all parts are correct and any incidental trimming or drilling will have been done prior to coating. Also, it will give you a practice run to familiarize yourself with the process, to lessen the likelihood of damaging the finish during final installation. CBI Off Road is NOT RESPONSIBLE for paint or powder coating costs, damage to paint or powder coating, or costs associated with inadvertently painting or powder coating components that are defective or were shipped or assembled in error. It is the customer's responsibility to pre-install and verify that all parts are correct prior to paint or powder coat


## Questions?

Call: 866-522-0697


Email: [info@cbioffroadfab.com](mailto:info@cbioffroadfab.com)

## Hardware 1:1 Scale View


**A** 2 – M10x1.5x40 ss Button Head Cap Screw

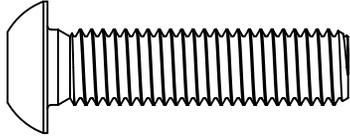

**B** 2 – 3/8" X 7/8" X .043 - .057 Flat Washer

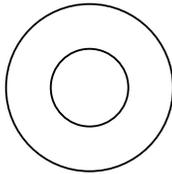


**C** 2 – M10 x 1.5 Class 8 Hex Flange Nut Nyloc Zinc

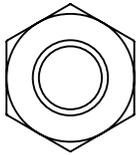

## Note for Dealers and Installers:

It is your responsibility to ensure instructions are given to the end user or client.

## Exploded Product/Hardware View

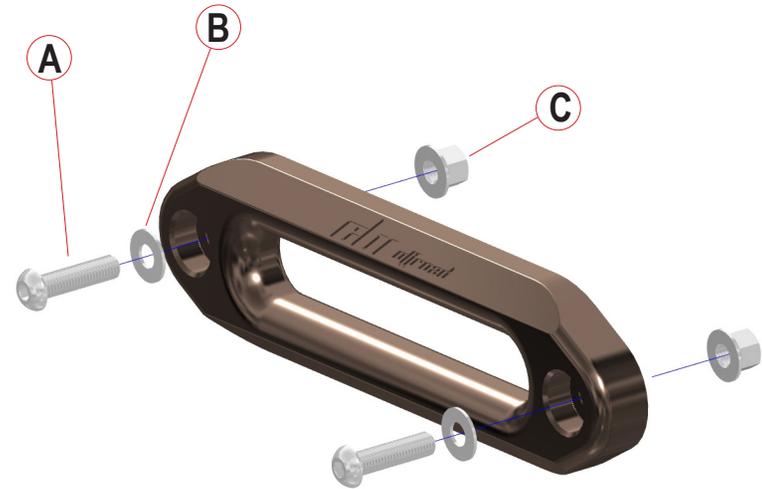

### 33% Thicker than standard fairleads

- Thicker fairlead allows for large radius
- \*Reduces stress on winch rope
- \*Extends rope life

### Cnc machined for ultimate precision

### Seamlessly integrates with cbi front bumpers

### Lowest friction fairlead on the market

- Gunmetal grey type iii hard anodized
- Ptfе (teflon®) impregnated
- \*The coefficient of friction of the hard anodize / ptfе combination is 50% lower than hard anodizing alone.
- \*Highly resistant to atmospheric and marine corrosion and is an electrically insulating coating.

### Standard 10" bolt mount spacing

### Compatible with 1/2" rope thimbles

### Includes stainless steel mounting hardware

- Correct length for most cbi bumpers
- May need to source different hardware for specific use case

### For synthetic winch rope only



792 E Iona Rd.  
Idaho Falls, ID 83274  
[cbioffroadfab.com](http://cbioffroadfab.com)  
**208.528.0664**